


XYRON® Design Runner™ User Guide

www.xyron.com

1

Getting Started

1. Take all the components out of the box
2. Press purple access button on printer to open top cover
3. Remove the tape from the print cartridge and install the black ink cartridge (like shown in the picture below)
4. Install two 9 volt batteries, attach battery connectors last
5. Close lid
6. Insert Starter Disc as shown in the picture

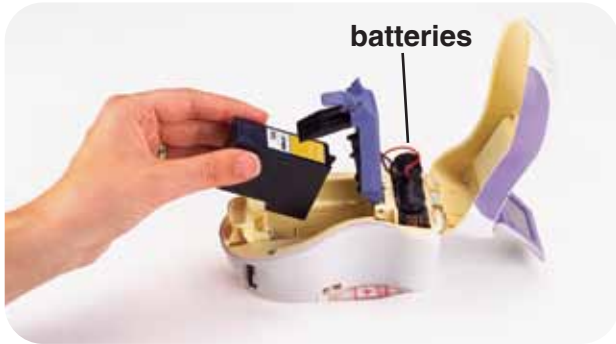

Design Runner Includes:

- Design Runner
- One Black Ink Cartridge
- One Starter Disc
- Docking Station



2

The Basics



- A Power Button
- B Left & Right Scroll Button (use to select desired image)
- C Continuous (prints the same image repeatedly) Print Button
- D Print Button
- E Wrench Button
- F Docking Station
- G Crosshair +

Using Your Design Runner

1. Move and hold release lever in front of docking station to remove Design Runner from base.
2. Turn on the Design Runner by pressing the button. A
3. Scroll through the Images using the buttons. B
4. Place the Crosshairs + on the the base of the printer to show where you desire the Design Runner to start printing. (See "Positioning Prints" below for details)
5. Press and hold green Print Button D until you see a "P" appear in the bottom left of the screen.
6. Based on where you want to print, Slide the Design Runner left to right or right to left while keeping the green button pressed.

-Note: Prints on absorbent surfaces: paper, tissue, bare wood, ribbon, fabric, vellum.

-Note: The print cartridge is on the bottom and in the middle of the machine so you need to slide the Design Runner 5 to 6 inches before you can see what you are printing




3

Tips for Perfect Prints

1. Before you use your Design Runner utilize the maintenance feature to ensure clean, clear printing. Do this by pressing the Wrench Button on the lower right portion of the key pad. A black screen will show up on the screen, press and hold the green Print Button, wait for the "P" and then slide the Design Runner across a piece of scrap paper.
2. If the ink did not print out completely (as shown "a" below) use a slightly damp paper towel and wipe off the ink head. Repeat Step 1 & 2 until the unit prints properly (as shown "b" below).

Preserving the print cartridge


1. When not in use, always keep the printer on the base.
2. Keep a new cartridge in its packaging until you are ready to install it.
3. Do not remove a cartridge from the printer except to replace it, clean it, or store it in an airtight container. The cartridges do not print correctly if left exposed for an extended period of time.
4. Keep any additional cartridges in a storage unit when not in use.

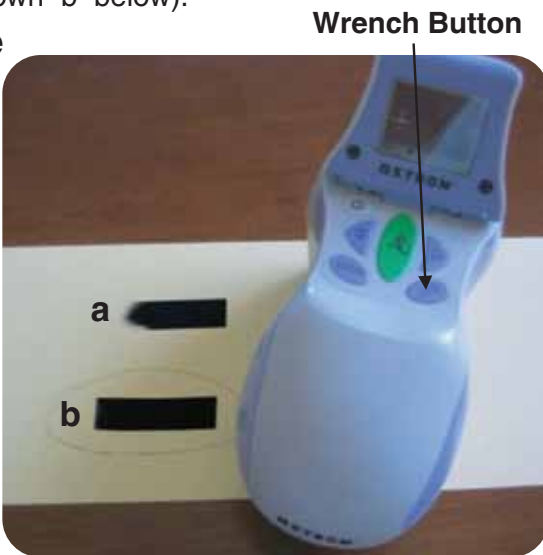

4

Positioning Prints

1. After pressing the green Print Button, the screen shows a "P" in the lower left corner. Keep green button pressed when printing.
2. In most cases it appears so quickly it is not noticed, however with long images (for an 8" phrase) it will take 2-3 seconds to appear.
3. Place the + located on the bottom right or left of the Design Runner where you would like the image to begin printing
4. The + located on the screen marks the beginning the image.
5. The + located on the bottom right or left hand side of the Design Runner marks where the image will begin printing on the media (paper, ribbon, etc.)
6. When using the + located on the right, glide the Design Runner to the right to print and the image will start printing at the beginning; when using the + located on the left, glide the Design Runner to the left to print and the image will start printing at the end point.

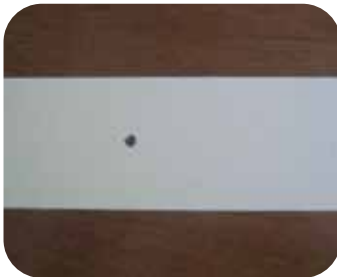

The black dot is marked on the paper to identify the point at which the printing is desired.



Line up the crosshair + on the black dot.

Press and hold the green Print Button wait for the "P" to appear, then slide across media while keeping Print Button pressed.




The print will begin on the paper as it appeared on the screen.

5

Continuous Borders

1. Select the button with three squares on the printer to activate continuous mode printing (the screen will display three squares in the lower right corner) press the button again to turn off continuous mode.
2. When printing on your project a piece of scrap copy paper or other thin paper can be placed underneath. While the Design Runner is in continuous mode begin printing on the scrap paper, then onto the patterned paper, and then back on the scrap paper.

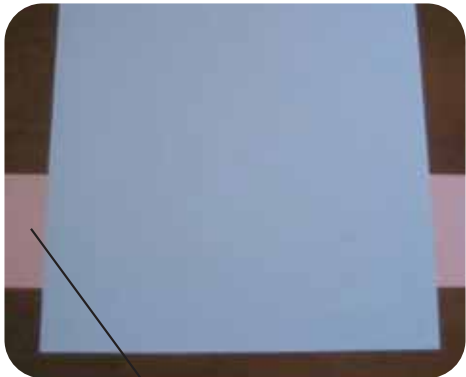

Scrap paper



Important Tips

1. Always press and hold the green Print Button, wait for the "P" to appear, then slide across media while keeping Print Button pressed.
2. The machine may automatically turn off if the purple button on the back of the unit is pressed, so do not rest your palm on the back of the machine during use.
3. The Design Runner has a battery save feature and will automatically turn off when not in use.
4. The Design Runner has an optical sensor on the bottom that 'tells' the machine to print when moved with the green Print Button pressed. If the optical sensor is stationary it will not print. If the sensor is placed on something reflective (glass or a lacquered table) the machine will not sense any movement and will not print.
5. Be sure to place the Design Runner back on its docking station when not in use to help protect the print head and keep the ink cartridge from drying out.

Troubleshooting

Symptom	Solution	Symptom	Solution
Display is not lit or printer does not print.	Make sure batteries are installed properly. See "Getting Started." Replace the batteries with new, 9-volt alkaline batteries.	Nothing happens when a Design Disc is inserted.	Make sure the Design Disc is not damaged. Only use a Design Disc.
Image does not print clearly.	Use a paper that is a heavier weight. Clean the print cartridge. See "Tips for Perfect Prints." Wipe the print cartridge nozzles. See "Tips for Perfect Prints."	Low battery	Make sure batteries are installed properly. See "Getting Started." Replace the batteries with new, 9-volt alkaline batteries.
Printer turns off unexpectedly.	Press . Note: The printer automatically turns off after 2 minutes. Replace the batteries with new, 9-volt alkaline batteries.	Missing or invalid printhead	Make sure the print cartridge is installed correctly. See "Getting Started." Replace the print cartridge.
Design Disc cannot be inserted.	Make sure you are inserting the Design Disc correctly with label facing out. See "Getting Started." Only use a Design Disc.	Missing or invalid Design Disc	Make sure the Design Disc is inserted correctly with label facing out. See "Getting Started." Make sure the Design Disc is not damaged. Only use a Design Disc.

Xyron, Inc. warrants the Xyron Design Runner is free from defects in material and workmanship for a period of one (1) year from the date of purchase.* Xyron, Inc. will repair or replace (at Xyron's discretion) a defective product or part without charge, with proof of purchase. If it is determined the product is damaged by neglect or misuse, the warranty is null and void.

*If you purchase this product outside the U.S.A., Xyron, Inc. will warrant this product in accordance with the country's law where purchased.

Customer Service

We want you to be happy with your purchase. If for any reason you have a problem or question, please contact Xyron Customer Service at 1-800-793-3523 or 480-443-9419. You can also email us at: customerservice@xyron.com. Please register your product online at www.xyron.com.

For customer service outside of the U.S.A.:

Australia: Phone: 1300 ARTLINE, email: custsupport@pelikanartline.com.au
New Zealand: Phone: 0800 800 526, email: customersupport@pelikanartline.co.nz
Europe: Esselte Business BVBA Industriepark Noord 29 9100 Sint-Niklaas Belgium

©2010 Xyron, Inc.

Visit www.xyron.com for more information and great project ideas.


1

Introducción

- Saque todos los componentes de la caja
- Presione el botón violeta de acceso de la impresora para abrir la cubierta superior
- Quite la cinta del cartucho y instale el cartucho de tinta negra (como se muestra en la imagen siguiente)
- Instale dos baterías de 9 voltios, coloque por último los conectores de la batería
- Cierre la tapa
- Inserte el Disco como se muestra en la imagen

Design Runner Incluye:

- Design Runner
- Un cartucho de tinta negra
- Un Disco
- Estación de conexión

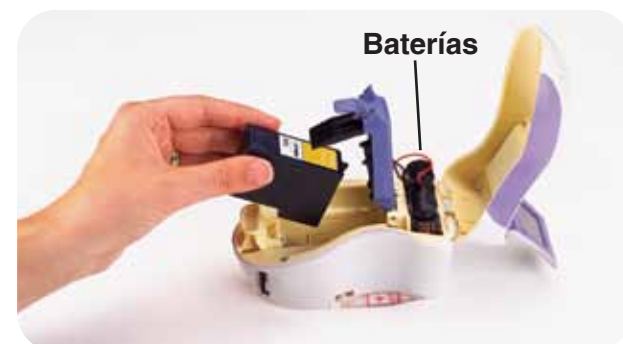

Baterías



2

Los Fundamentos



- Botón de encendido
- Botón de desplazamiento hacia la izquierda y hacia la derecha (se utiliza para seleccionar la imagen deseada) ◀ ▶
- Botón de impresión continua (imprime la misma imagen repetidamente)
- Botón de impresión □□□
- Botón de mantenimiento
- Estación de conexión
- Guía +

Cómo utilizar su Design Runner

- Mueva y sostenga la palanca de liberación que se encuentra en el frente de la estación de conexión para quitar la Design Runner de la base.
- Encienda la Design Runner presionando el botón A
- Desplácese por las imágenes con los botones B
- Coloque la guía + en la base de la impresora para indicar dónde desea que la Design Runner comience a imprimir. (Consulte más abajo "Cómo ubicar las impresiones" para obtener más información)
- Presione y mantenga presionado el botón verde D de impresión hasta que aparezca una "P" en la parte inferior izquierda de la pantalla.
- Según dónde desea imprimir, deslice la Design Runner de izquierda a derecha o de derecha a izquierda mientras mantiene el botón verde presionado.

-Nota: Imprime en superficies absorbentes: papel, papel de seda, madera, cinta, tela, papel vitela

-Nota: El cartucho se encuentra en la parte inferior y en el medio de la máquina.




G

3

Consejos para impresiones perfectas

- Antes de usar su Design Runner utilice la característica de mantenimiento para garantizar una impresión limpia y clara. Hágalo presionando el botón de la llave en la parte inferior derecha del teclado. Aparecerá una pantalla negra, mantenga presionado el botón verde de impresión, espere que aparezca la "P" y luego deslice la Design Runner sobre un trozo de papel de borrador.
- Si la tinta no imprimió de forma completa (como se muestra en "a" a la derecha) utilice una toalla de papel levemente humedecida y limpie el cabezal de tinta. Repita los pasos 1 y 2 hasta que imprima correctamente (como se muestra en "b" a la derecha).

Botón de la llave

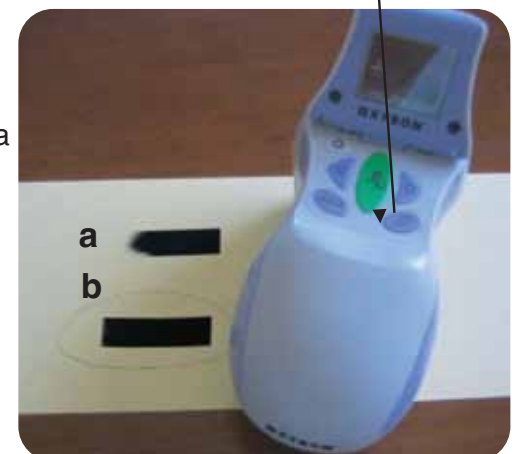

a

b

Cómo conservar el cartucho

- Cuando no se utiliza, siempre mantenga la impresora en la base.
- Mantenga el cartucho nuevo en su embalaje hasta que desee instalarlo.
- Sólo retire el cartucho de la impresora para cambiarlo, limpiarlo o guardarlo en un contenedor hermético. Los cartuchos no imprimen correctamente si quedan expuestos por un período de tiempo prolongado.
- Mantenga los cartuchos adicionales en una unidad de almacenamiento cuando no se utilizan.

4

Cómo ubicar las impresiones

- Luego de presionar el botón verde de impresión, la pantalla muestra una "P" en la esquina inferior izquierda. Mantenga el botón verde presionado mientras imprime.
- En la mayoría de los casos aparece tan rápido que no se lo nota. Sin embargo, con imágenes más grandes (para una frase de 8") tardará 2-3 segundos en aparecer.
- Coloque la + ubicada en el lado inferior derecho o izquierdo de La Design Runner donde quisiera que se empiece a imprimir la imagen
- La + ubicada en la pantalla marca el comienzo de la imagen.
- La + ubicada en el lado inferior derecho o izquierdo de la Design Runner marca dónde se comenzará a imprimir la imagen en el medio (papel, cinta, etc.)
- Al utilizar la + ubicada a la derecha, deslice la Design Runner hacia la derecha para imprimir y la imagen comenzará a imprimirse desde el comienzo. Al utilizar la + ubicada en el lado izquierdo, deslice la Design Runner hacia la izquierda para imprimir y la imagen comenzará a imprimirse desde el final.



El punto negro se marca en el papel para identificar el punto en el que se desea imprimir.



Alinee la guía + sobre el punto negro.




La impresión comenzará en el papel como aparece en la pantalla.

5


Bordes continuos

Seleccione el botón con tres cuadrados □□□ de la impresora para activar el modo de impresión continua (la pantalla mostrará tres cuadrados □□□ en la esquina inferior derecha), presione el botón nuevamente para desactivar el modo continuo.

Al imprimir su proyecto se puede colocar debajo un papel de borrador o otro papel delgado. Mientras la Design Runner se encuentra en el modo continuo comience a imprimir en el papel de borrador, luego en el papel tramado y luego vuelva al papel de borrador.

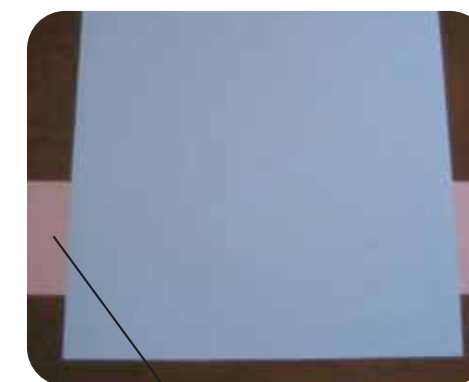

Papel de borrador

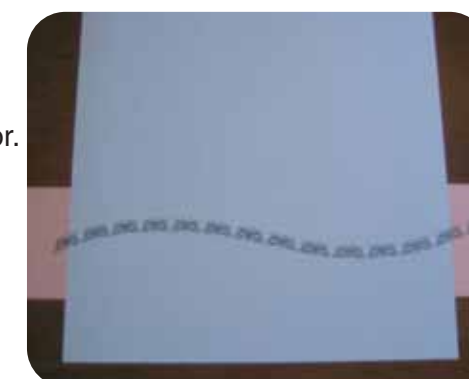

Consejos importantes

- Siempre presione y mantenga presionado el botón verde de impresión, espere que aparezca la "P", luego deslice por el medio.
- La máquina puede apagarse automáticamente si se presiona el botón violeta de la parte trasera de la unidad, por lo tanto no apoye la palma de su mano en la parte trasera de la máquina.
- La Design Runner tiene una característica de ahorro de batería y se apagará automáticamente cuando no se la utiliza.
- La Design Runner cuenta con un sensor óptico en la parte inferior que le indica a la máquina que debe imprimir cuando se la mueve con el botón verde de impresión presionado. Si el sensor óptico está quieto no imprime. Si el sensor está ubicado sobre algo reflectante (vidrio o una mesa laqueada) la máquina no detectará ningún movimiento y no imprimirá.
- Asegúrese de colocar nuevamente la Design Runner en la estación de conexión cuando no se la utiliza para ayudar a proteger el cabezal de impresión y evitar que se seque el cartucho de tinta.

-Nota: Coloque papel en su superficie reflectante (debajo del sensor) antes de imprimir

Solución de problemas

Síntoma	Solución	Síntoma	Solución
La pantalla no está iluminada o la impresora no imprime.	Asegúrese de que las baterías estén instaladas correctamente. Consulte "Introducción". Reemplace las baterías por baterías alcalinas nuevas de 9 voltios.	No ocurre nada cuando se inserta el Disco de diseño.	Asegúrese de que el Disco de diseño no esté dañado. Sólo utilice un Disco de diseño
La imagen no se imprime con claridad.	Utilice un papel más grueso. Limpie el cartucho. Consulte "Consejos para impresiones perfectas". Limpie las boquillas del cartucho. Consulte "Consejos para impresiones perfectas".	Batería baja	Asegúrese de que las baterías estén instaladas correctamente. Consulte "Introducción". Reemplace las baterías por baterías alcalinas nuevas de 9 voltios.
La impresora se apaga inesperadamente.	Presione B Nota: La impresora se apaga automáticamente después de 2 minutos. Reemplace las baterías por baterías alcalinas nuevas de 9 voltios.	Falta un cabezal de impresión o no es válido	Asegúrese de que el cartucho esté instalado correctamente. Consulte "Introducción". Reemplace el cartucho.
No se puede insertar el Disco de diseño	Asegúrese de que está colocando el Disco de diseño de forma correcta, con la etiqueta hacia afuera. Consulte "Introducción". Sólo utilice un Disco de diseño	Falta el Disco de diseño o no es válido	Asegúrese de que el Disco de diseño esté colocado correctamente con la etiqueta hacia afuera. Consulte "Introducción". Asegúrese de que el Disco de diseño no esté dañado. Sólo utilice un Disco de diseño

Más información

En nuestro sitio web www.xyron.com encontrará:

- Videos con instrucciones
- Accesorios
- Inspiración

¿Necesita más tinta?

Su impresora utiliza los siguientes cartuchos:

Color	Número de pieza
Negro	47839
Rojo	47840
Verde	47841

Pedido de suministros

- Visite nuestro sitio web: www.xyron.com
- Llame a nuestro Soporte Técnico **1-877-392-9474**