



XYRON 4400

step by step guide to loading lamination material

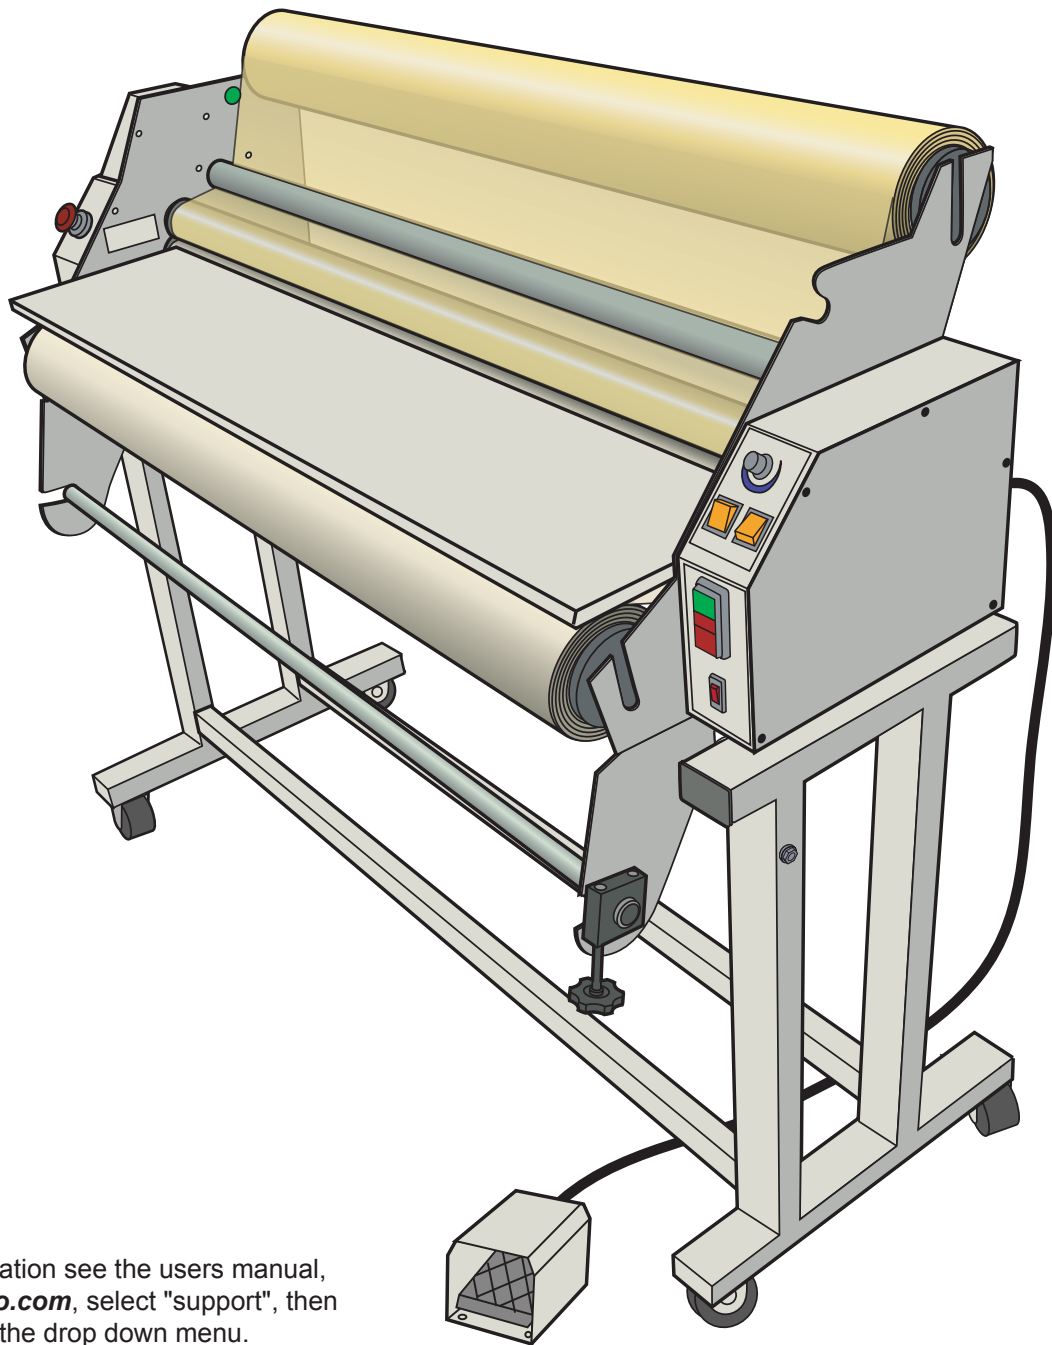


For more information see the users manual,
or visit xyronpro.com, select "support", then
select 4400 from the drop down menu.



- 1 Remove media supporter
before loading laminate rolls.

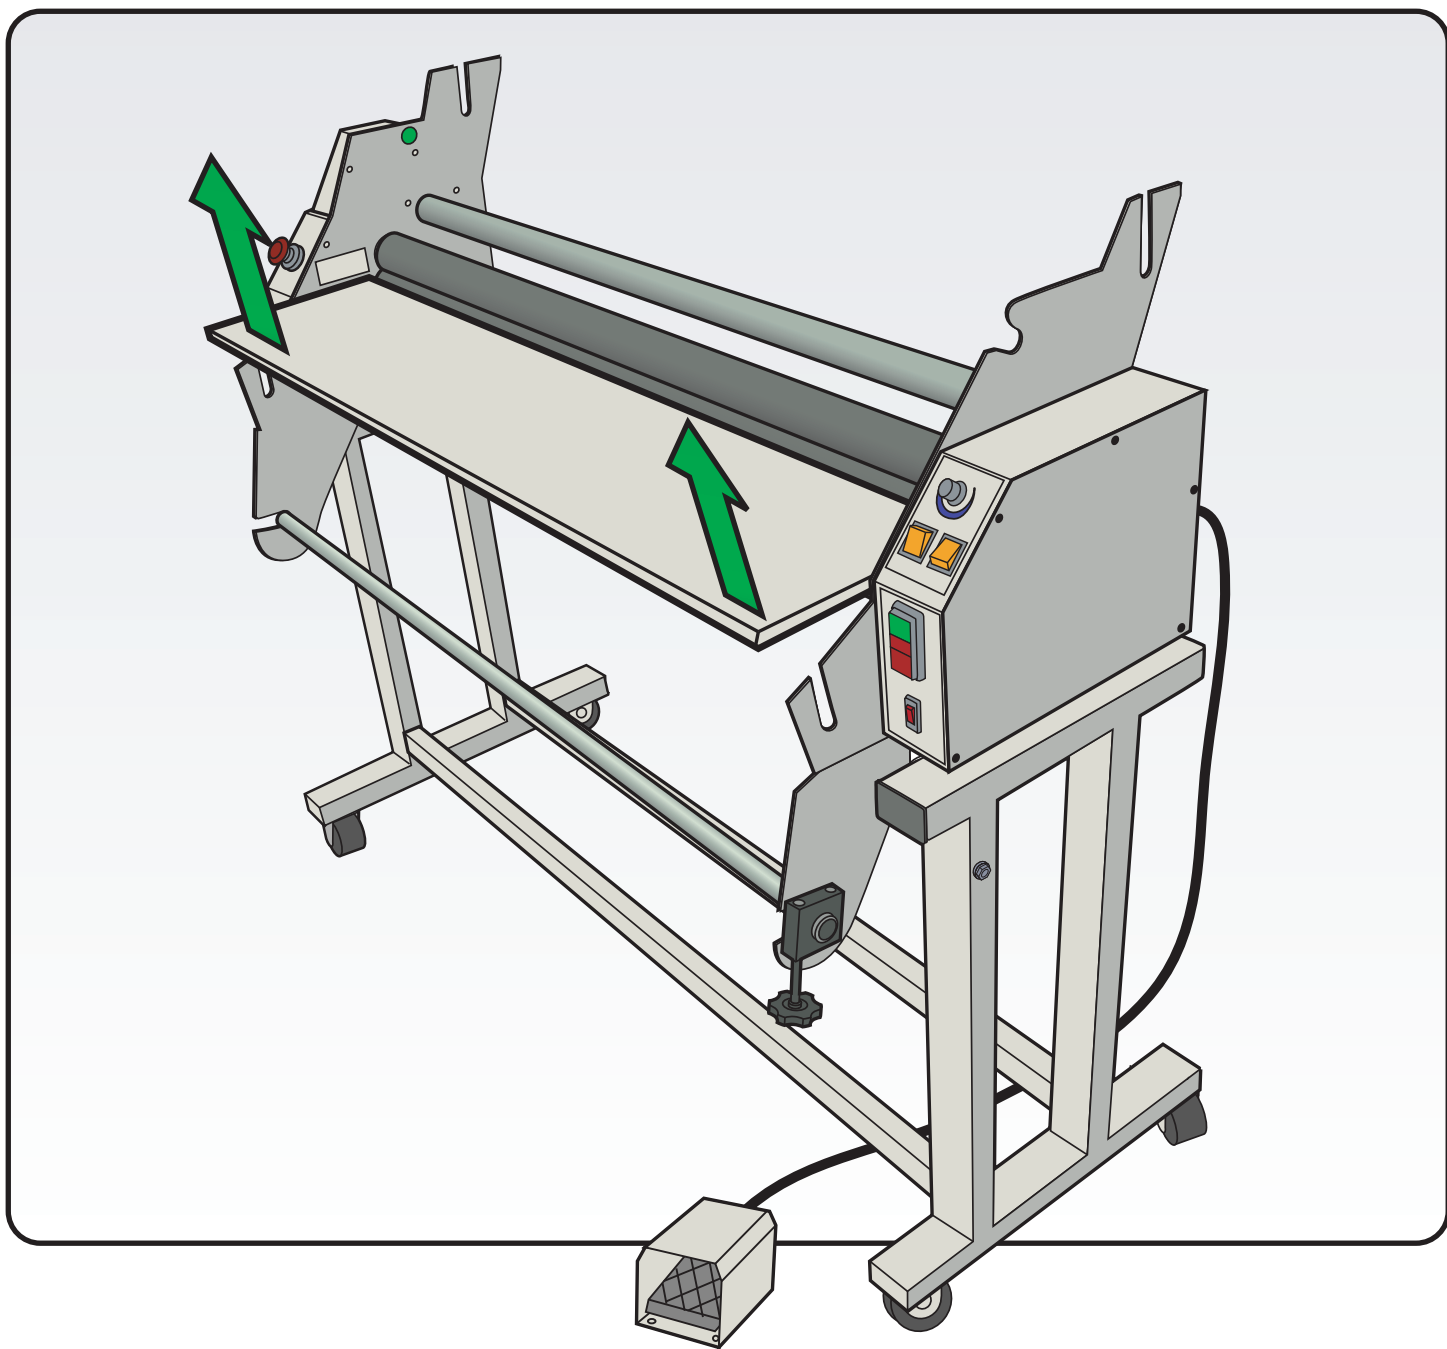



2 Match bottom and top roll with the **yellow and green dots** on machine. On each one of the ends it will tell you top roll or bottom roll.

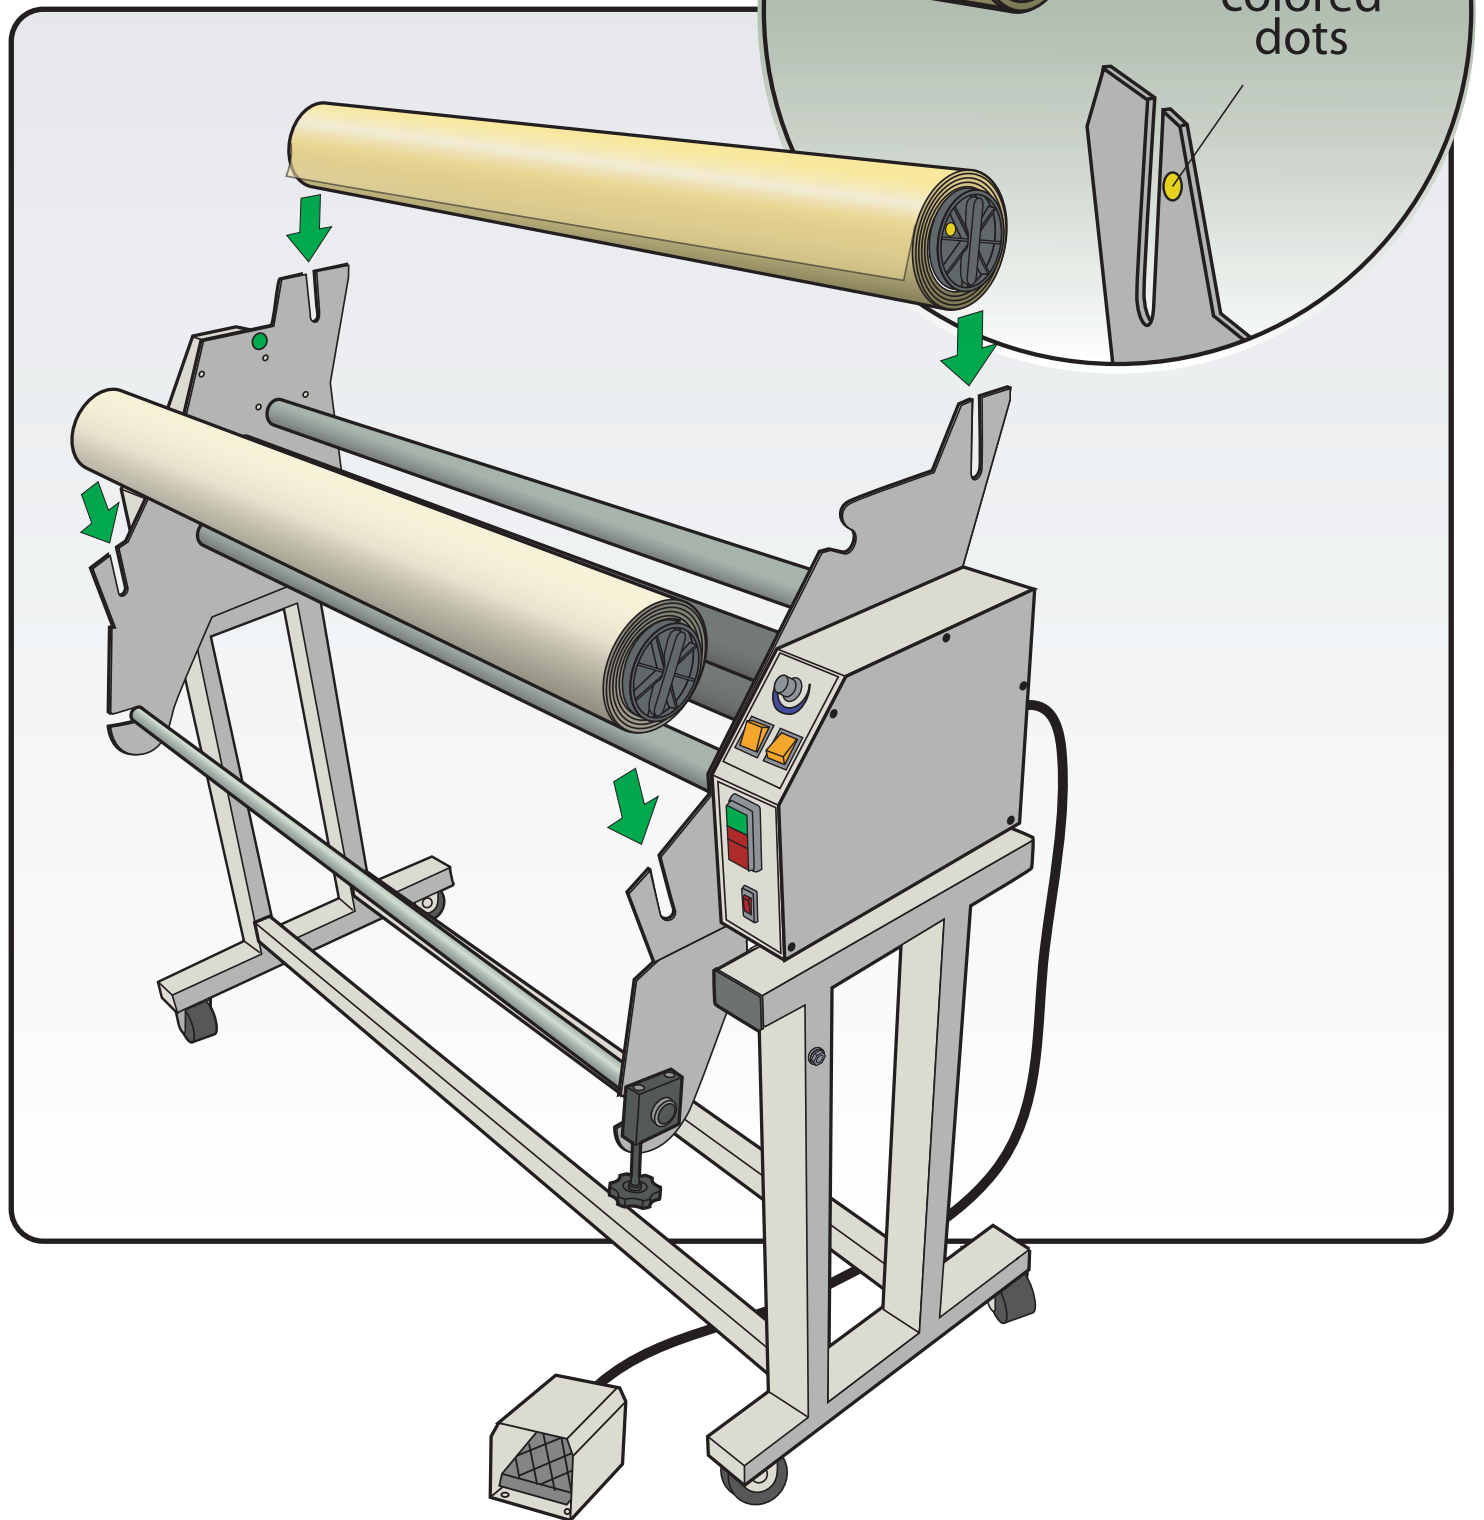



- 3** Take the ends of the *top roll*, weave it under the Teflon bar, pull the sheet toward you, grabbing all the way on each end. Make sure you pull out enough so it **hangs just below the bottom roller**.

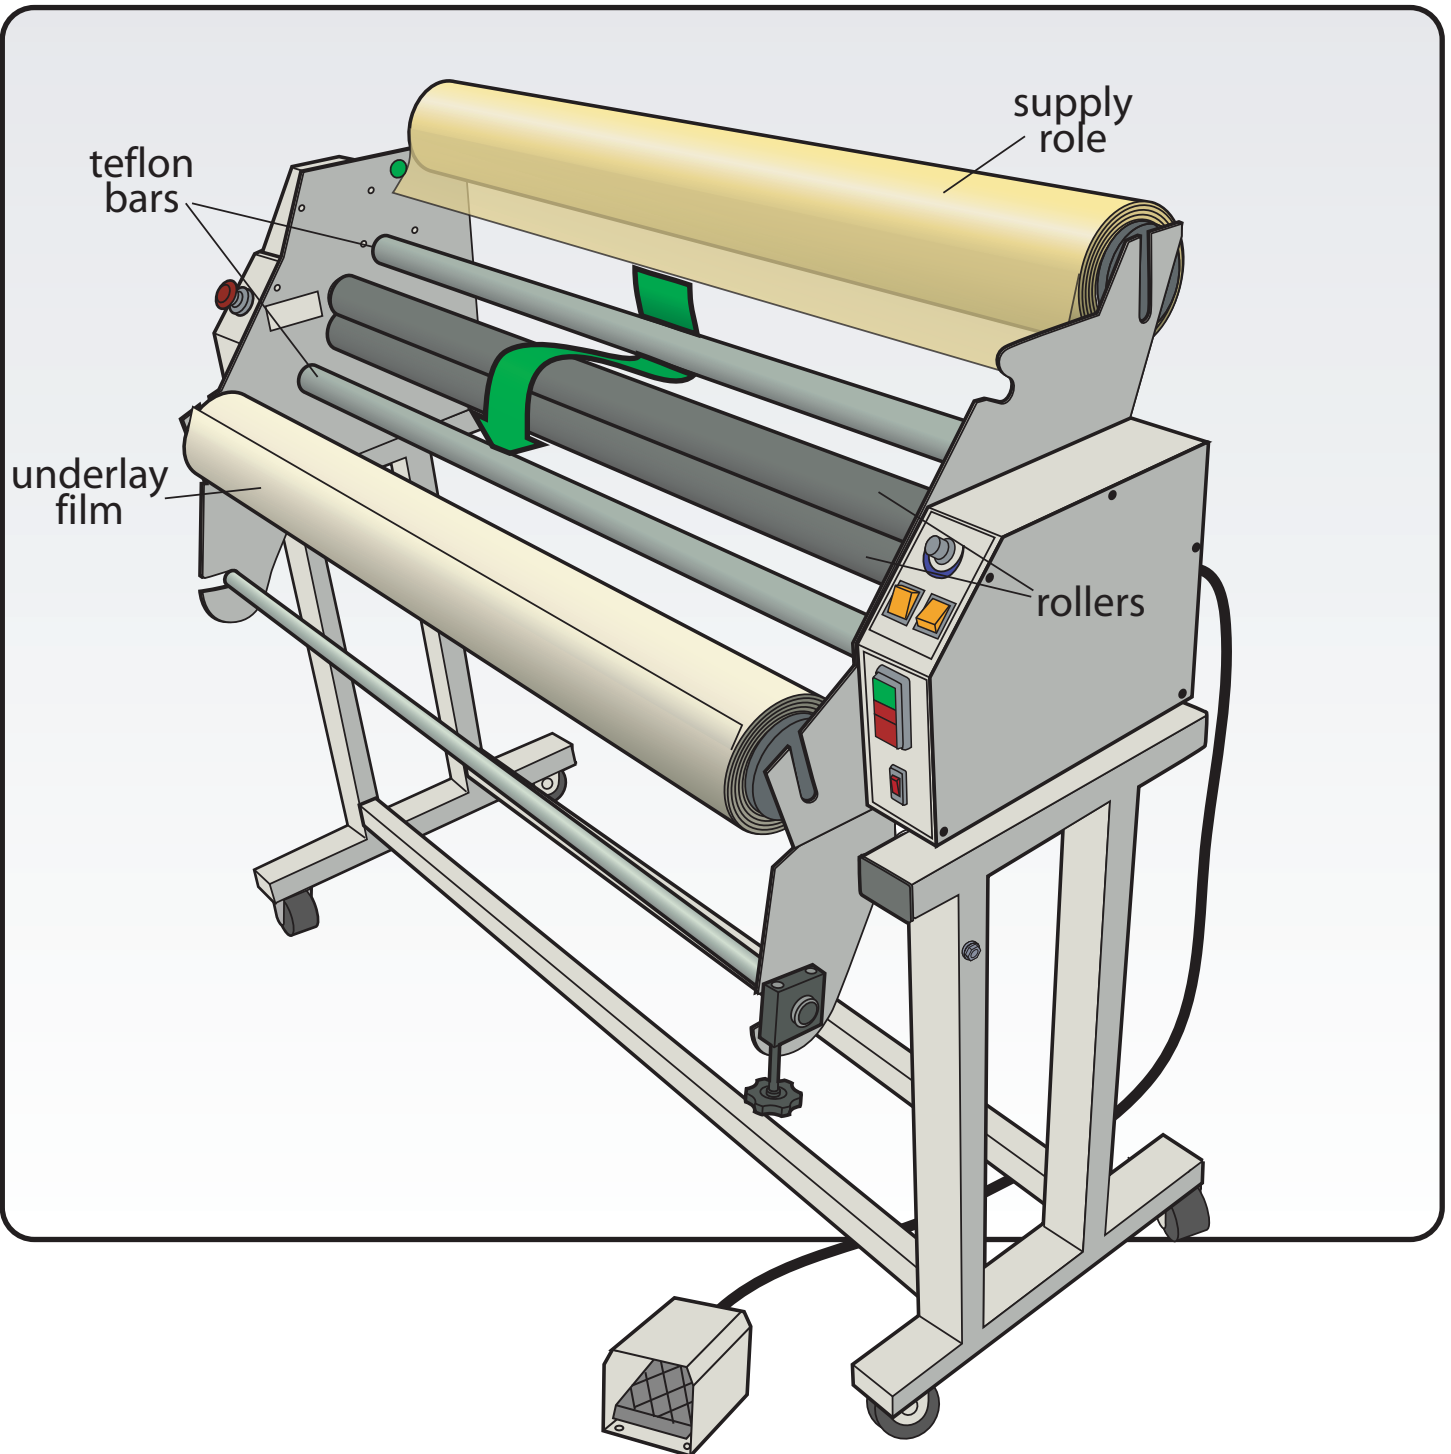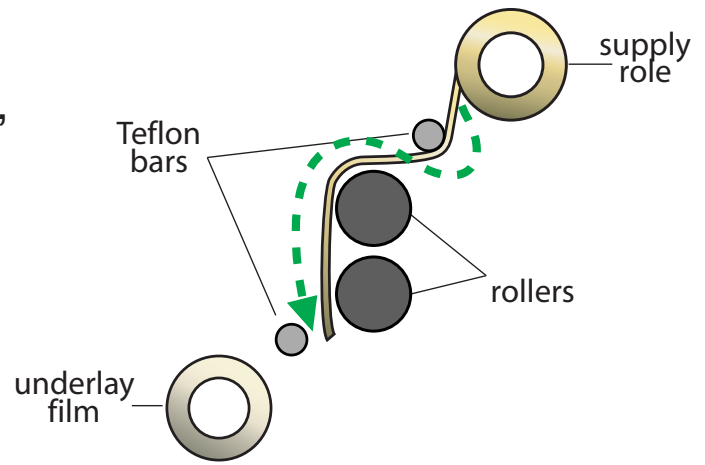



- 4.** Take the ends of the *bottom roll* weave it under the Teflon bar pull the sheet toward you, grabbing all the way on each end. This time, pull out enough to **stick firmly to the material from the top bar**

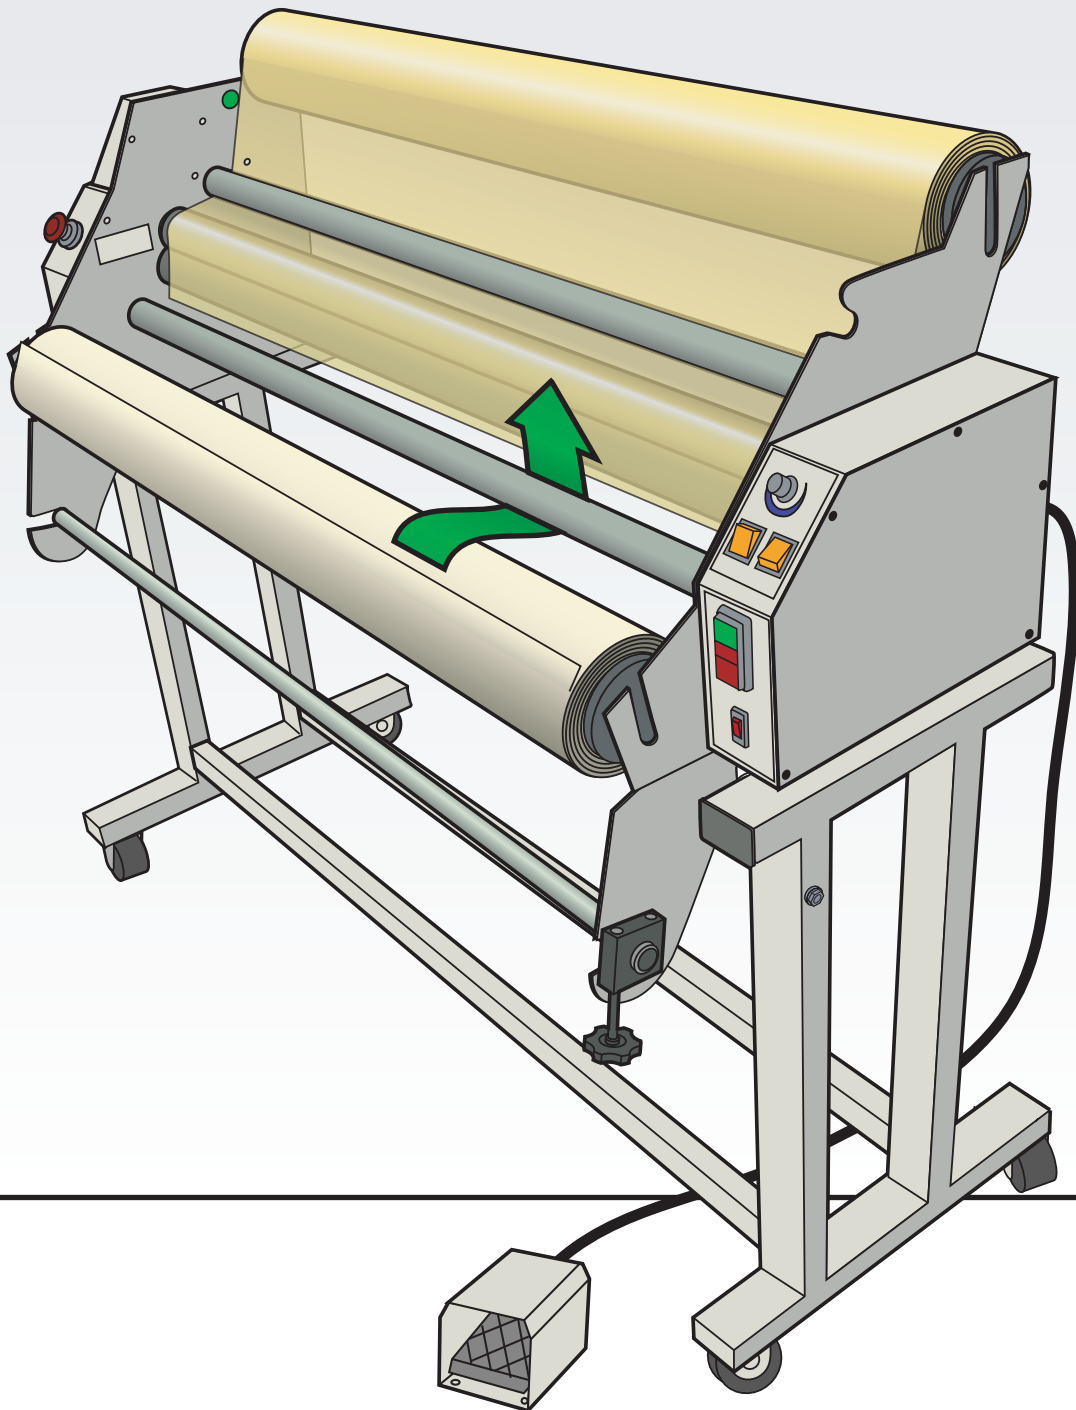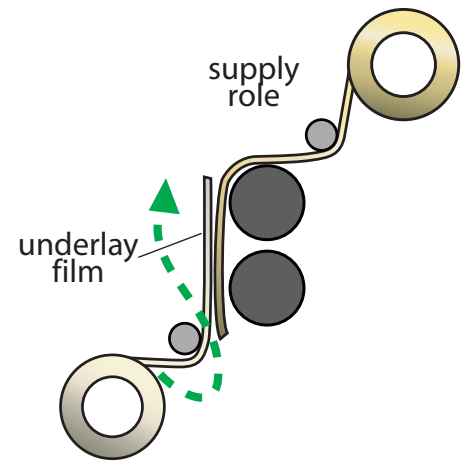

- 5.** Using the foot pedal (*direction, FORWARD; feed' FOOT; speed control, 3*) start feeding it through so you can see about 3" coming out between rubber rollers in the back.

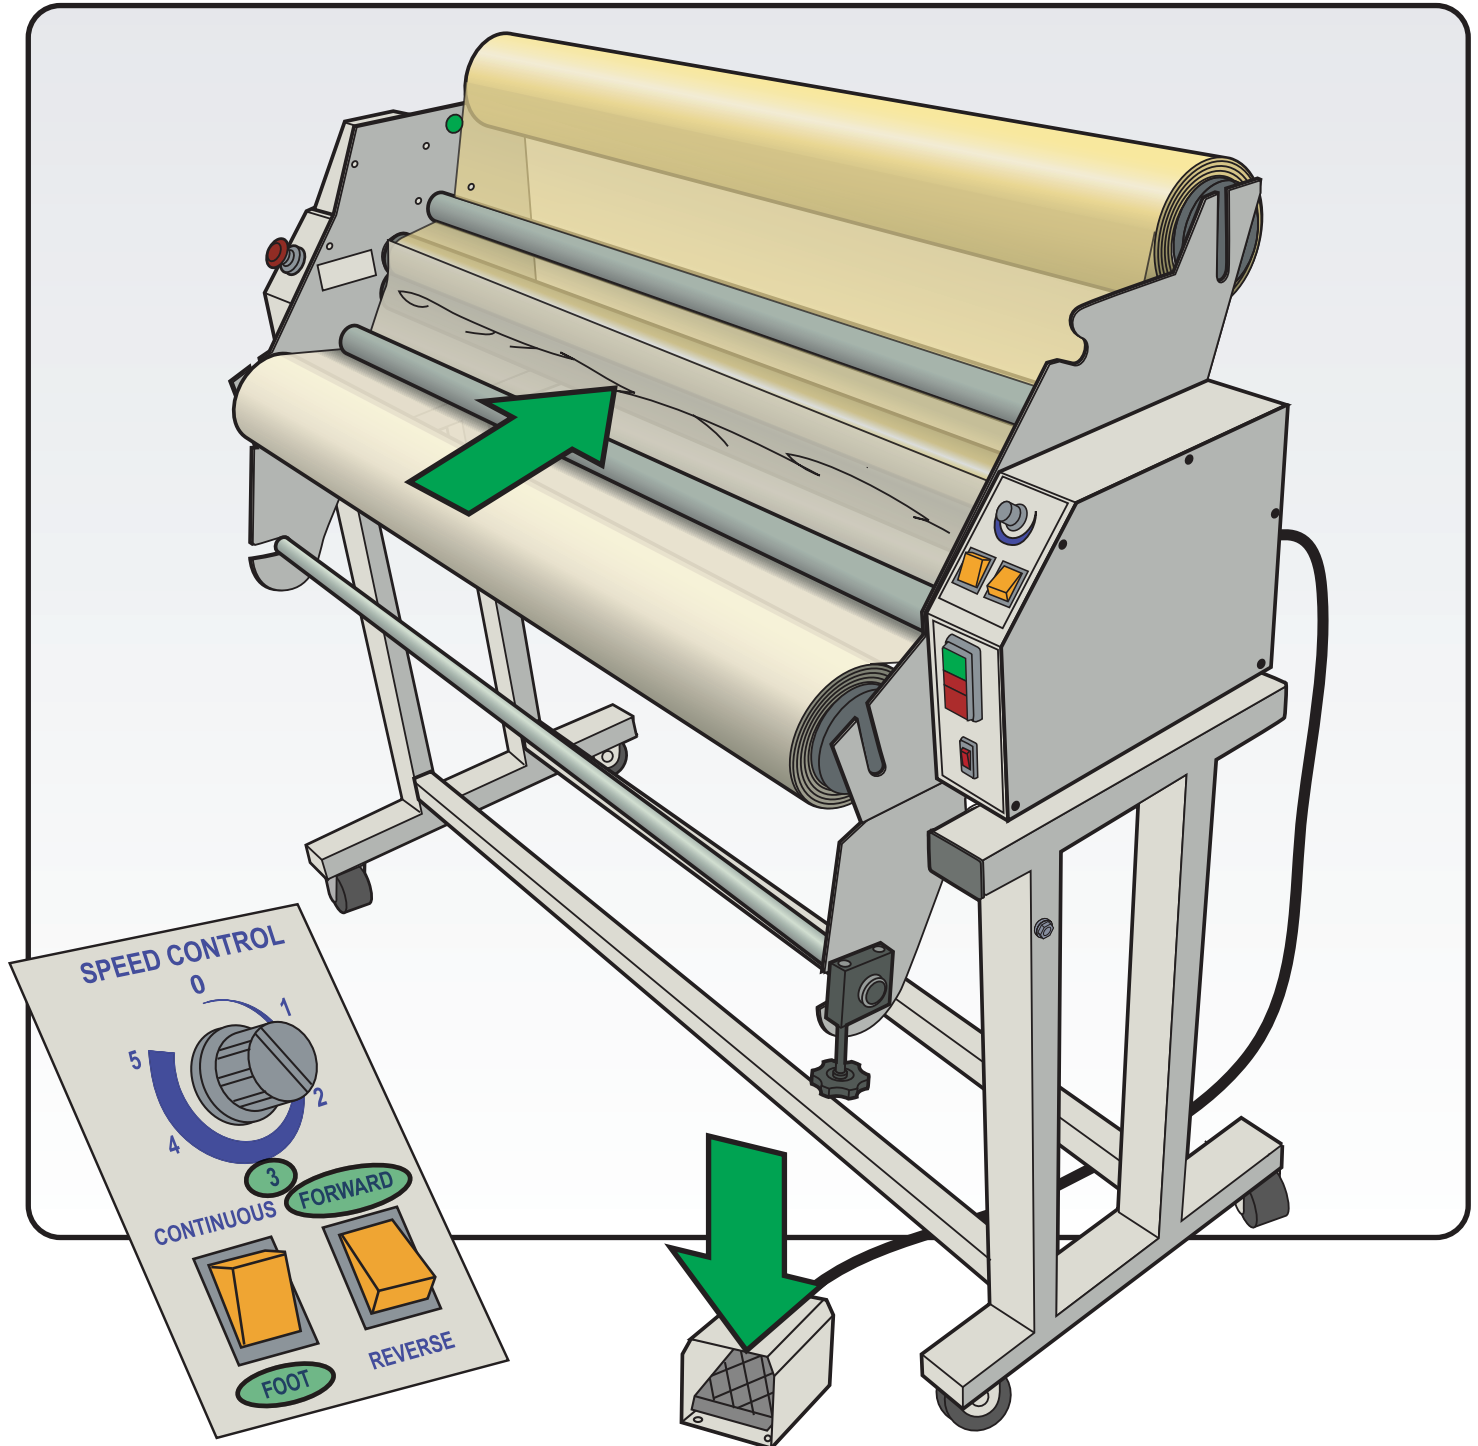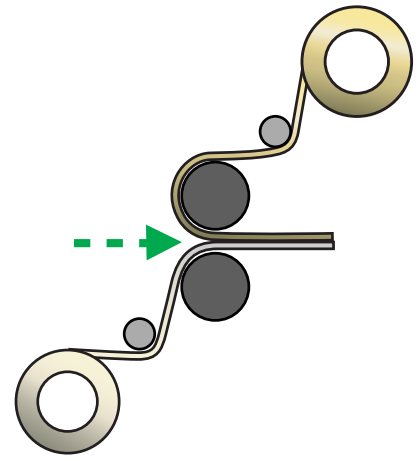

- 6** ■ To remove the wrinkles from the material, press the foot pedal and use the load plate, or a scrap piece of cardboard and feed it through the machine until the wrinkles disappear.

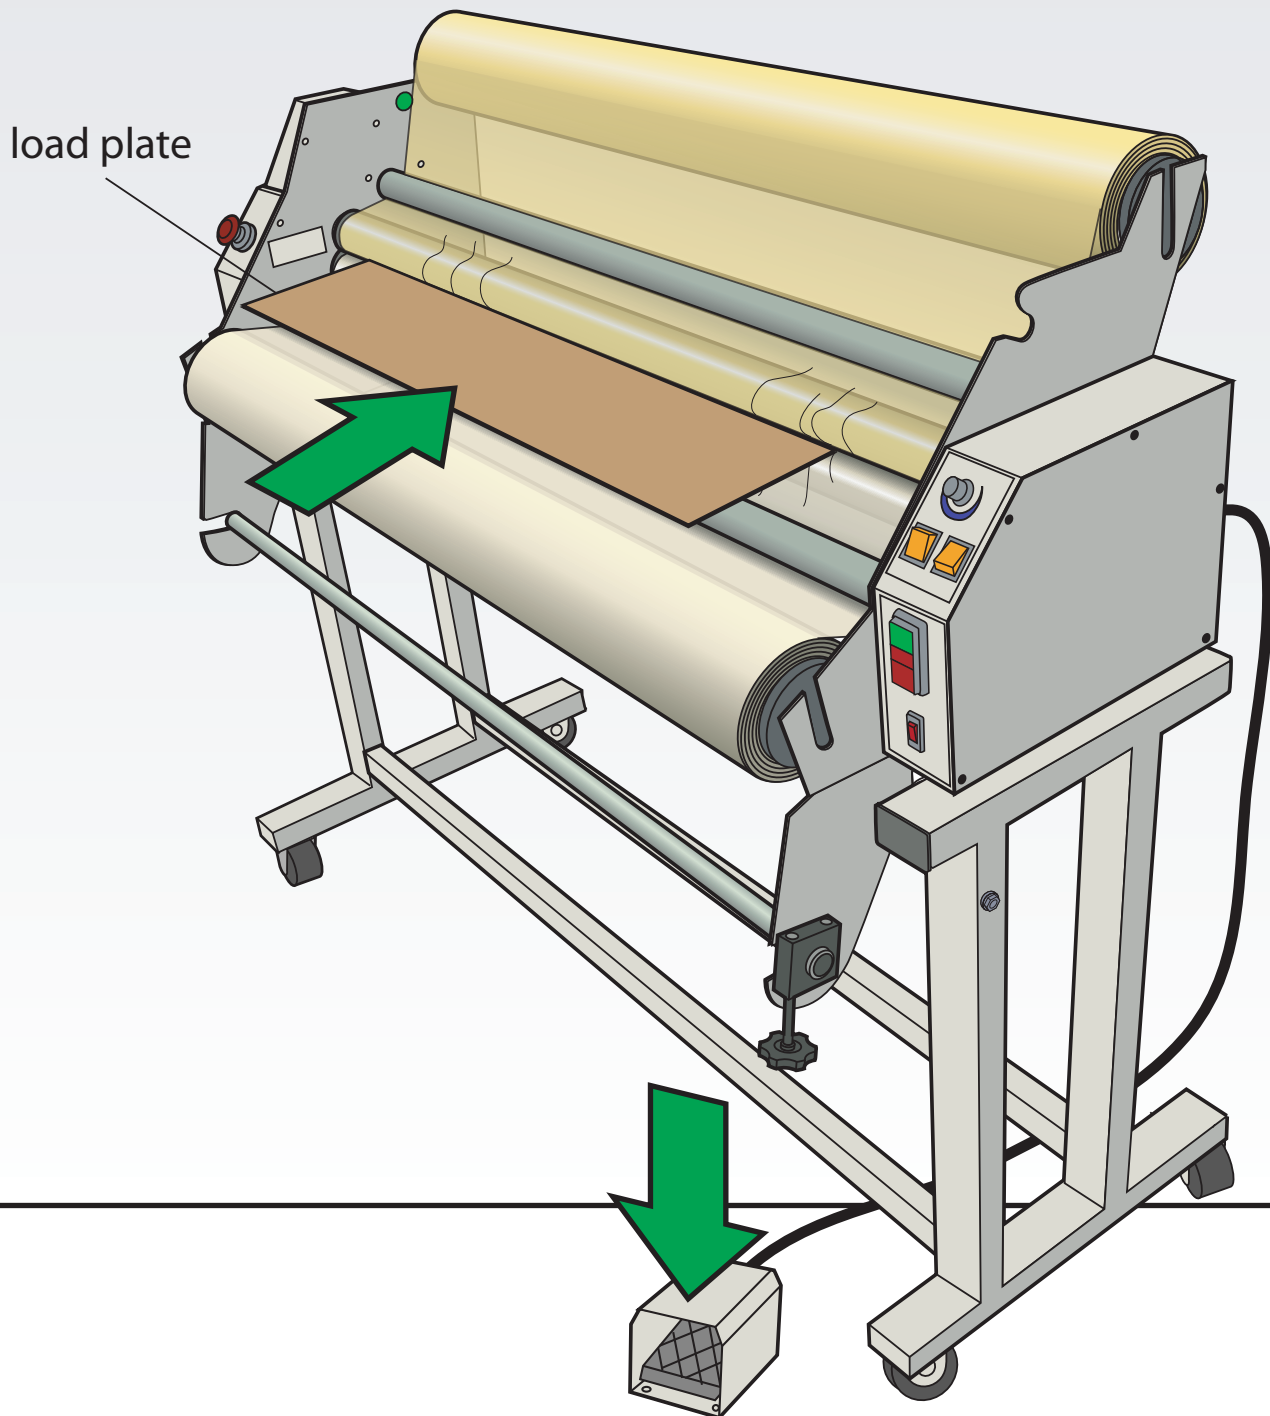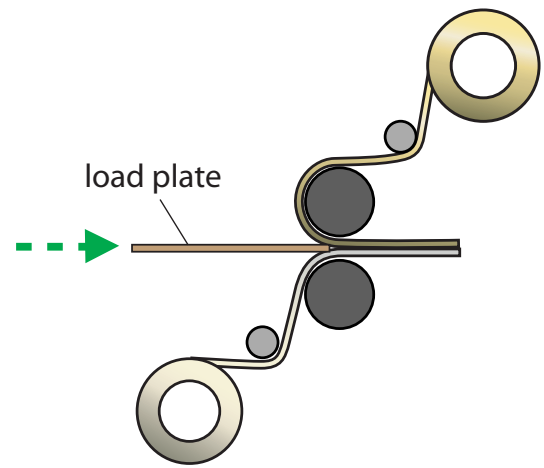

- 7** ■ Replace the media support tray and you are now ready to begin use of the XYRON 4400.

For more information see the users manual, or visit ***xyronpro.com***, select "support", then select 4400 from the drop down menu.

